


ATA600 DUAL POWER SWITCH ADAPTOR USER MANUAL

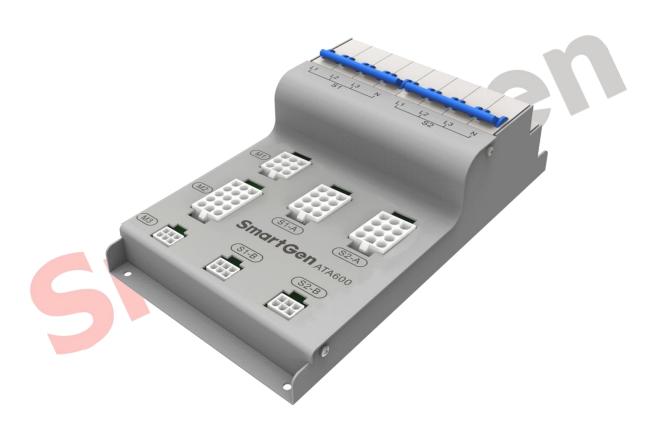

SMARTGEN (ZHENGZHOU) TECHNOLOGY CO., LTD.



SmartGen — make your generator smart
SmartGen Technology Co., Ltd.
No.28 Jinsuo Road
Zhengzhou City
Henan Province

P. R. China

Tel: 0086-(0)371-67988888/67981888 0086-(0)371-67991553/67992951 0086-(0)371-67981000(overseas)

Fax: 0086-(0)371-67992952 **Web:** <u>www.smartgen.com.cn</u>

www.smartgen.cn

Email: sales@smartgen.cn

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Applications for the copyright holder's written permission to reproduce any part of this publication should be addressed to SmartGen Technology at the address above.

Any reference to trademarked product names used within this publication is owned by their respective companies.

SmartGen Technology reserves the right to change the contents of this document without prior notice.



Date	Version	Note
2019-12-30	1.0	Original Release



CONTENT

1	OVERVIEW	4
2	PERFORMANCE AND CHARACTERISTICS	4
3	SPECIFICATION	4
4	PANEL DESCRIPTION	5
5	APPLICATION DIAGRAM	8
6	ACCESSORY ILLUSTRATION	9
7	CASE DIMENSIONS	9





1 OVERVIEW

ATA600 Dual Power Switch Adapter is a kind of adapter which makes convenience for connection between HAT600/HAT600N/HAT600P/HAT700 dual power ATS controller and smart breaker, reducing a lot of field wiring work for users, not only labor saving, time saving but also reliable.

2 PERFORMANCE AND CHARACTERISTICS

- Suitable for 3Ph 4W AC system;
- Two integrated 400V/50Hz/10A circuits of air breaker, which are individually used to connect two circuits of AC power;
- All-in-one integrated adaptor, which can simultaneously connect S1 breaker, and S2 breaker;
- Suitable for HAT600/HAT600N/HAT600P/HAT700 dual power ATS controller;
- Cold rolled plate closure;
- With screw installation method, adapter is fixed by 4 screws.

3 SPECIFICATION

Table 2 Performance Parameters

Item	Description				
Rated Working Voltage	AC 400V 50/60Hz				
Max Working Current	10A				
Air Breaker	400V~ 50Hz 10A				
Case Dimensions	144.4mmx252mmx75.3mm				
Working Conditions	tions Temperature: (-25~+70)°C Humidity: (20~93)%RH				
Storage Condition	Temperature: (-30~+80)°C				
Insulation Strength	Apply AC1.5kV voltage between high voltage terminal and low				
	voltage terminal and the leakage current is not more than 3mA within				
	1min.				
Weight	1.6kg				



4 PANEL DESCRIPTION

4.1 PANEL ILLUSTRATION

Panel illustration is as Fig. 1.

Two circuits of air breaker, connect separately with S1/S2 AC power.

Connector M1, M2, M3 need to connect to the side of HAT600/HAT600N/HAT600P/HAT700 controller.

Connector S1-A, S1-B need to connect to the side of S1 breaker.

Connector S2-A, S2-B need to connect to the side of S2 breaker.

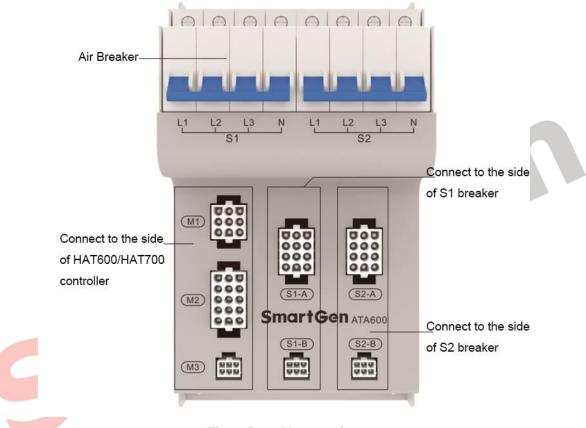


Fig. 1 Panel Instruction



4.2 CONNECTOR ILLUSTRATION

The pin numbers of connector terminals are as Fig. 2.

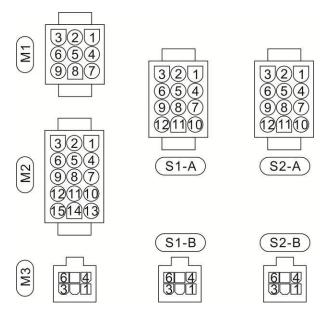


Fig. 2 Pin Numbers of Connector Terminals

Terminal Wirings of connector is as Table 3.

Table 3 Connector Wiring Illustration

Connector	Pin	Wire	Wire Harness No.	Connector	Pin	Wire	Wire Harness No.
No.	No.	No.		No.	No.	No.	
	1	M-15			1	Q1-28	WH600-Q1-30-RM
	2	M-14			2	Q1-2	
	3	M-13			3	Q1-27	
	4	M-16			4	Q1-33	
M1	5	NC			5	Q1-30	
	6	M-12		C4 A	6	Q1-36	
	7	M-17	WH600-M-20-RM	S1-A	7	Q1-24	
	8	M-18			8	Q1-35	
	9	M-11			9	Q1-29	
	1	M-4			10	Q1-32	
	2	M-28			11	Q1-1	
	3	M-5			12	Q1-25	
	4	M-8		S1-B	1	NC	
	5	M-1			2	Q1-4	
M2	6	M-9			3	Q1-23	
	7	M-6			4	NC	
	8	M-27			5	Q1-22	
	9	M-3			6	Q1-5	
	10	M-10					
	11	M-29					



ATA600 DUAL POWER SWITCH ADAPTOR USER MANUAL

Connector	Pin	Wire	Wire Harness No.	Connector	Pin	Wire	Wire Harness No.
No.	No.	No.		No.	No.	No.	
	12	NC					
	13	M-7					
	14	M-2					
	15	M-30					
	1	M-21					
	2	M-22					
MO	3	NC					
M3	4	M-24					
	5	M-19					
	6	NC					

NOTE: Connector S2-A and S2-B connected wire number starts with Q2; Others are the same with S1-A, S1-B, connected with WH600-Q2-30-RM. For example: P1 wire number of connector S2-A is Q2-28.

Wire number definition:

means the position where wire needs to connect; definition same as wire No.



5 APPLICATION DIAGRAM

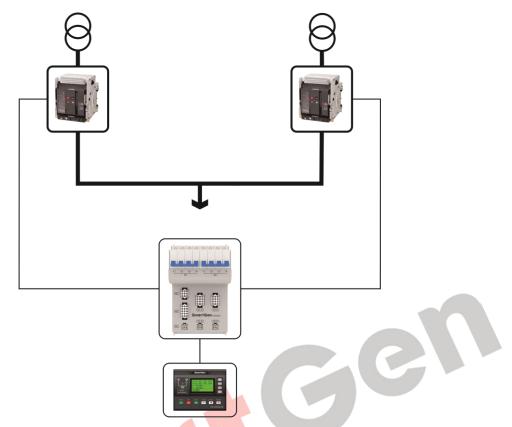


Fig. 3 Application Diagram



6 ACCESSORY ILLUSTRATION

The connected wire harness of this product is optional; Users can make clarification at ordering, note the harness requirements and breaker type.

7 CASE DIMENSIONS

This adapter is designed by screw installation method, and is fixed by four screws at installation.

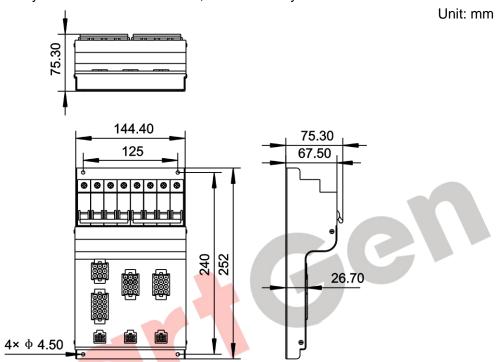


Fig. 4 Case Dimensions and Panel Cutout