

**SGPT110 Pressure Transmitter** 

**USER MANUAL** 



**Smartgen Technology** 



## Smartgen<sup>®</sup> English trademark Smartgen — make your generator smart

Smartgen Technology Co., Ltd. No. 28 Jinsuo Road Zhengzhou City P. R. China Tel: +86-371-67988888 +86-371-67981888 +86-371-67991553 +86-371-67992951 +86-371-67981000(overseas) Fax: 0086-371-67992952 Web: http://www.smartgen.com.cn/

Web: <u>http://www.smartgen.com.cn/</u> <u>http://www.smartgen.cn/</u> Email: <u>sales@smartgen.cn</u>

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying or storing in any medium by electronic means or other) without the written permission of the copyright holder.

Smartgen Technology reserves the right to change the contents of this document without prior notice.

If the colors of actual products are difference from instruction, please take the material object as the standard.

Version History

Date	Version	Content
2013-12-18	1.0	Original release

This manual is suitable for SGPT110 pressure transmitter only.

Clarification of notation used within this publication.

SIGN	INSTRUCTION		
	Highlights an essential element of a procedure to ensure		
	correctness.		
	Indicates a procedure or practice, which, if not strictly		
CAUTION!	observed, could result in damage or destruction of equipment.		
WARNING!	Indicates a procedure or practice, which could result in injury to personnel or loss of life if not followed correctly.		

# Contents

1 OVERVIEW	5
2 CHARACTERISTICS	6
3 PERFORMANCE PARAMETER	7
4 TERMINAL CONNECTION	8
5 ELECTRICAL CONNECTION	9
6 CASE DEMENSION	
7 INSTALLATION	
8 ATTENTION	

#### **1 OVERVIEW**

SGPT110 piezoresistive pressure transmitter is based on MEAS original advanced highly stable silicon piezoresistance transmitter installed into a 304 stainless steel enclosure. Compatible with various mediums, stable, reliable and highly accurate, SGPT110 can be widely used for gas and liquid pressure measurement.

SGPT110 Pressure Transmitter Version 1.0 2013-12-18 Page 5 of 12

#### **2 CHARACTERISTICS**

- ➢ Measuring range: (0~1)MPa
- > Two-wire standard output: 4 mA ~20 mA
- Wide working temperature range: (-40°C~125°C), with temperature compensation and common mode rejection functions.
- Whole stainless steel structure
- O-shape gasket
- > Standard screw thread pressure measurement method
- > Pluggable connection, small volume, low power consumption.


#### **3 PERFORMANCE PARAMETER**


Item	Content		
Measuring range	(0~1)MPa		
Overload capacity	250% Full Scale Pressure		
Pressure type	Gauge pressure		
Measuring dielectric	Gas and liquid which compatible with stainless steel 304.		
Measurement Accuracy Class	Class 0.25		
Working temperature	-40°C~125°C		
Compensation temperature	-20°C ~85°C		
Power supply range	DC 12V~36V (DC 24V)		
Signal output	4 mA ~20 mA		
Load resistance	R <sub>L</sub> ≤(V <sub>+</sub> - 7.5V)/20mA		
Enclosure protection	Hersman Plug-type(IP65)		
Safety and explosion prevention	EXIA II CT5		
Connector and enclosure	stainless steel 304		
O-shape gasket	Fluororubber		
Tramsmitter mebrane	Stainless steel 316L.		


SGPT110 Pressure Transmitter Version 1.0 2013-12-18 Page 7 of 12

### **4 TERMINAL CONNECTION**

	Port	Description
	1	Positive source: V+
	2	4mA~20mA output: OUT
$\overline{2}$	3	Not connected
	4	Shell ground (Shield ground)

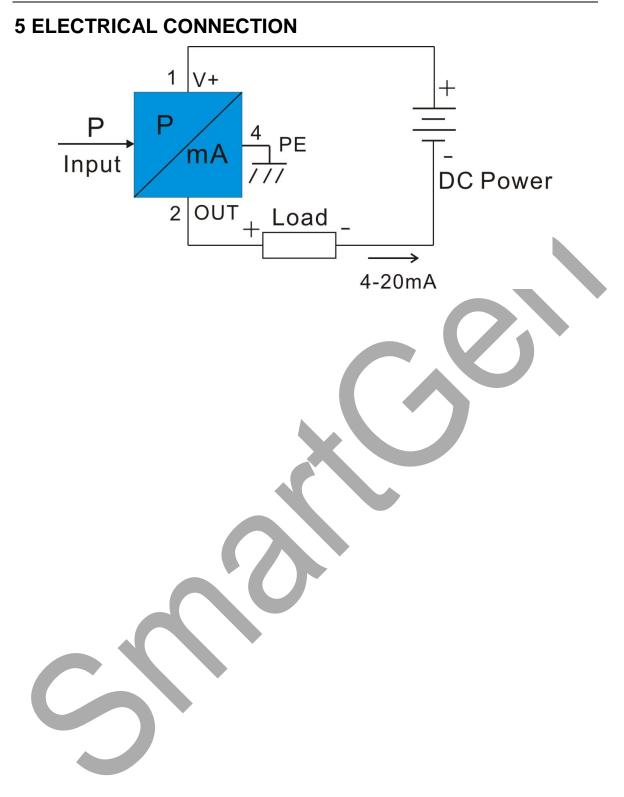

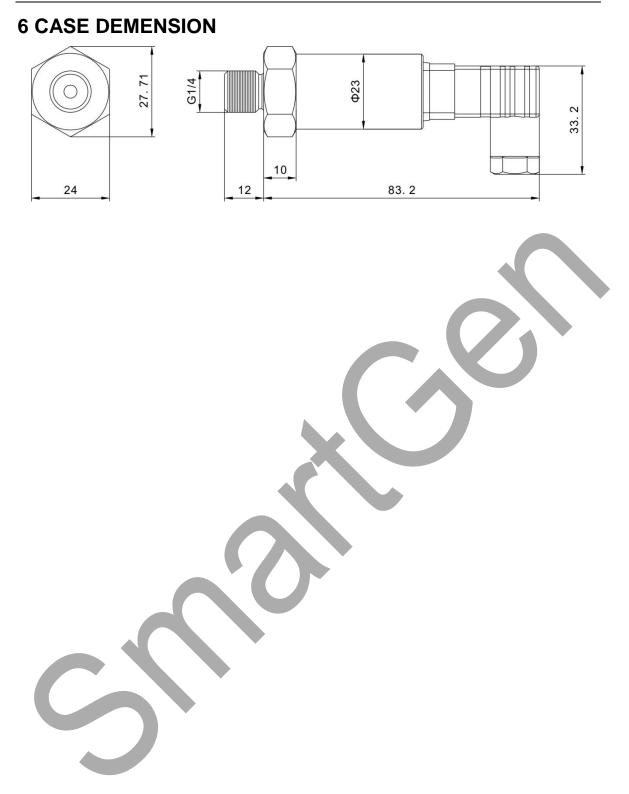

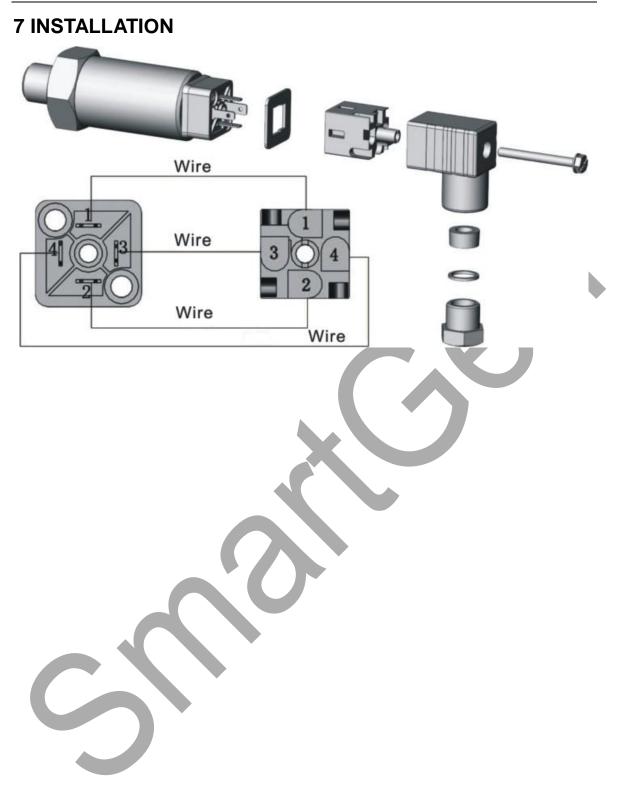

#### **8 ATTENTION**

- During installation ensure that measuring range and wiring is correct.
- The enclosure of the pressure transmitter should usually be connected to the ground; signal cable and power cable must not be crossed over; strong electromagnetic interference in the vicinity of the sensor must be avoided.
- Transmitter in use must be regularly calibrated according to the industry standards.
- Do not expose the transmitter to overpressure for a long time.
- Do not throw foreign bodies into the pressure opening, it can influence measurement results.
- Avoid transmitter contact with over-corrosive or overheated medium.
- During liquid pressure measurement, transmitter must not be installed to the place exposed to liquid impact (water hammer phenomenon) in order to avoid damage.
- During liquid pressure measurement, pressure tappings must be opened from the side of pipeline in order to avoid sediment slag accumulation.